

Installation

Preparation

Components



Rover Vans Door Stopper Installation Instructions

For Ram ProMaster Rear Door, Driver's Side

Installation Time:
20 - 30 Minutes

Components

Lay out all components on a clean work surface.
Check to make sure all pieces that are accounted for and undamaged.



1. Strap
2. Door Bracket
3. Frame Bracket


Tools Needed

- 10mm Wrench
- Plastic Trim Remover
- Allen Key Set

Installation

1

Using a plastic trim remover, take off the clips holding the lower panel of the rear door. Remove clips to access the top right of the panel. If not removing the panel, it can be bent for extra access.

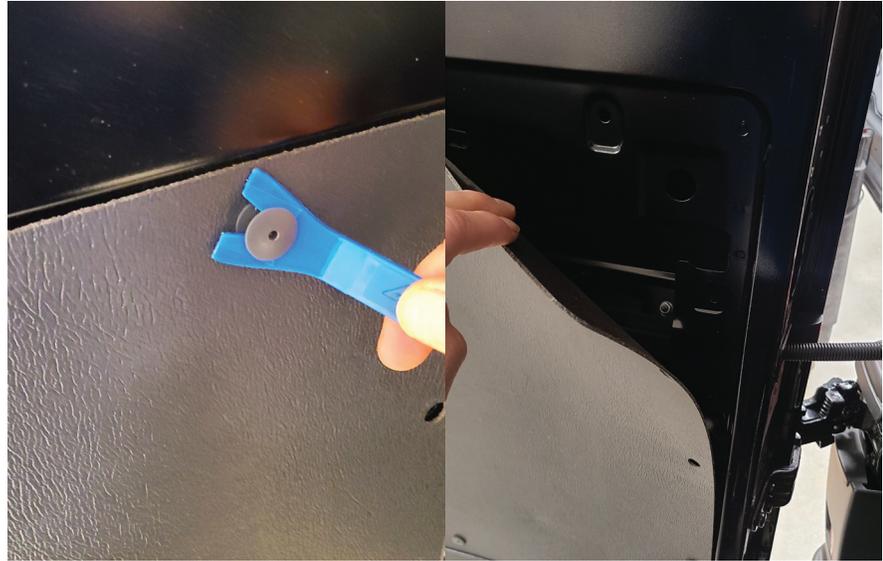

2

Optional: go to step 4 to loop the Strap before installing.

Use the bolts and nuts to secure the Door Bracket into the holes in the door.



3

Using an alley key and the wrench or your fingers, tighten the bolts and nuts on the Door Bracket.



Installation



4

Loop the Strap through the Door Bracket. Feed the strap through one hole of the Bracket, outside the door to inside. Then feed the strap through the other hole, inside the door to outside. Finally, feed the longer end of the strap through the loop in the other side.

5

Pull on the long end of the strap to tighten the loop.



6

Insert the Frame Bracket into the loop of the Strap. Using the threaded holes in the door frame, secure the Frame Bracket and Strap using an allen key and the provided bolts.



Now you are ready for adventures with your new Door Stopper!